



Forklift Scales

"Total Wireless Technology"

Cable-Free Carriage-Mounted Fork Lift Scales

Toll-Free 800-594-9288 - eMail: sales@sekoforkliftscales.com



North America

SEKO Scale Easy Installation

Generic Installation Guide

Nissan 50 Forklift Example

SAFETY WARNING!

- Forks and Scales are **HEAVY!**
- Think ahead. - Get help. - Pay Attention!
- Do not put hands, feet or other body parts under the forks or scales.

Please View the **SEKO** Video Installation Demonstrations on the Internet
(Strongly Recommended! <http://www.seko-na.org/>)

This Installation Guide provides only general suggestions.

You are responsible for safe work practices and sound judgment for lifting and maneuvering heavy objects. Be careful and thoughtful before proceeding.

Mechanical Installation of **SEKO** Scales should take less than ten minutes total time. Installation of the Class II **SEKO** Scales with up to 48 inch forks can usually be accomplished by one experienced worker. The videos which accompany this guide were filmed by the worker doing the installation. The video installation was the first installation ever attempted by the worker. An experienced worker will note the errors experienced in this learning process. *(Feel free to be amused at the in-expert moves.)*

This "first-time installation by an inexperienced worker" took less than ten minutes, total.



Scales Installed and Right Fork Re-Attached



SEKO Scale Top view Close-Up
Note the Shipping Locking Bolt

Installation Guide

Park the forklift:

- Park the forklift in a clear, flat space.
- Put the gearbox in neutral
- Set and lock the parking brake.
- Lower the carriage to a safe working height, just off the ground.

Remove the forks from the carriage:

- (Repeat for each fork)
- Release the positioner lock located at the top of the fork.
- Slide the fork to the center of the carriage.
- Position the fork over the center of the cutout on the bottom carriage rail.
- Lift the fork tip so that the bottom fork hook clears the carriage rail.
- Lift the fork off the top carriage rail.
- Transfer fork to ground.

Install **SEKO** Scale Module:

- (Repeat for each fork)
- Hook **SEKO** scale top hook on top carriage rail.
- Slide **SEKO** scale to one side, engaging the **SEKO** bottom hook on the bottom carriage rail.
- Set positioner lock located on top of the **SEKO** scale module.

Re-install Forks:

- (Repeat for each fork)
- Raise the carriage just off the ground so that the fork must be lifted about 1/2" to 1" to hook to the **SEKO** fork mounting rails.
- Raise a fork hooks to the level of the **SEKO** scale fork mounting rails and slide the fork on to the **SEKO** scale.
- Center the fork on the **SEKO** scale and engage the positioner lock.
- Remove the Shipping **Locking Bolt** and Save Bolt for future shipping of weigh module.

This concludes the installation of the **SEKO** Scale and Fork on the forklift carriage.

- The forks may be repositioned as normal. Release the positioner lock.
- Slide the **SEKO** scale and fork to the desired position
- Re-engage the positioner lock.

Remove Scale and Replace Forks:

- Video demonstrates rapid swap capability using **SEKO** Scale System. A truck breakdown requires only about five minutes to transfer the scale system to another truck. Very little production time is lost due to wait for mechanic assistance. When forks are removed, replace the Shipping Locking Bolts for travel.



Global Contact:

SEKO Malaysia Sdn Bhd <http://www.seko.com.my/>



"Total Wireless Technology"

Cable-Free Carriage-Mounted Fork Lift Scales

Toll-Free 800-594-9288 - eMail: sales@sekoforkliftscales.com

April, 2023